ADJ MENU: SETTINGS / DISPLAY / APPEARANCE / SOUND ADJUST MODE [PRESS ADJ MSG INPUT 30 EDIT BUTTON DISPLAY [NO ACTION] SID NUMBER TUNER \mathcal{D} CLOCK EDIT DISPLAY SCREEN SVR ON/OFF SCREEN SAVER OPERATION MSG INPUT EDIT Screen saver pattern 1 MESSAGE ON/OFF TONE-AM LOW/MID/HIGH S/A SENS. SPEED 1-7 Screen saver pattern 2 SCROLL LOW/MID/HIGH AUX SENS SETTING Screen saver pattern 3 SYSTEM CHECK [PRESS] START ON/OFF CODEMATIC Spectrum analyzer pattern 1 CODEMATIC INPUT D a APPEARANCE DIMMER IN AUTO/ILLUMI Spectrum analyzer pattern 2 DMR LEVEL 1-5 CONTRAST 1-11 Spectrum analyzer pattern 3 BLINK LED ON/OFF Spectrum analyzer pattern 4 BEEP ON/OFF \Box C SOUND AC PRO III STD/PRO Message information EQ SELECT P. EQ/BASS & TREBLE SP-SETTINGS SW [L] + SW [R] / CTR + SWSS SCAN The above 8 indications are displayed for SUB-WOOFER ON/OFF about 10 seconds each. NOTE: WHEN ON, SCREEN SAVERS WILL APPEAR WHEN YOU HAVE NOT OPERATED THE UNIT FOR ABOUT 45 HPF THROUGH/50/80/120 SECONDS. TO SCROLL THROUGH SCREEN SAVERS, PRESS THE [PREV] AND [NEXT] BUTTONS. SUB-W LPF THROUGH/50/80/120

AMP CANCEL

ON/OFF